


ASSEMBLY GUIDE

FLATROCK FLAT TOP GRILL

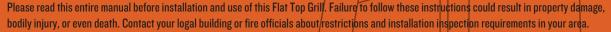





A MAJOR CAUSE OF FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES/(AIR SPACES) BETWEEN COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS PRODUCT BE INSTRUCTIONS


MANY PARTS OF THE FLAT TOP WILL BECOME VERY HOT DURING OPERATION. CARE MUST BE TAKEN TO AVOID DURING BOTH DURING OPERATION AND AFTERWARDS, WHILE THE FLAT TOP IS STILL HOT


Never leave the Flat Top unattended when young children are present. Never move the Flat Top when it is operating.

Let the Flat Top cool completely before moving or attempting to transport.

IMPORTANT: RETAIN FOR FUTURE REFERENCE. READ CAREFULLY

TRAEGER.COM

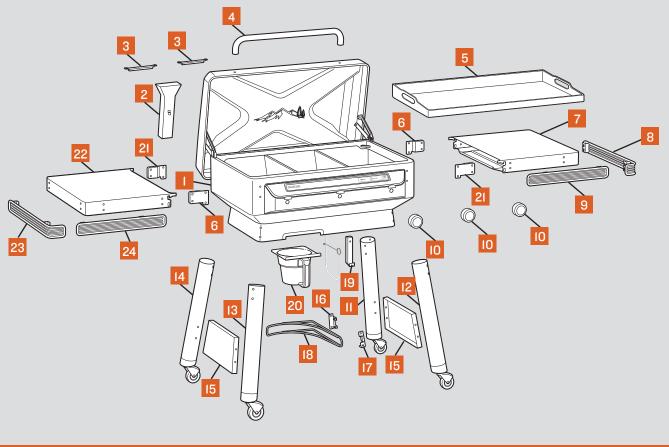

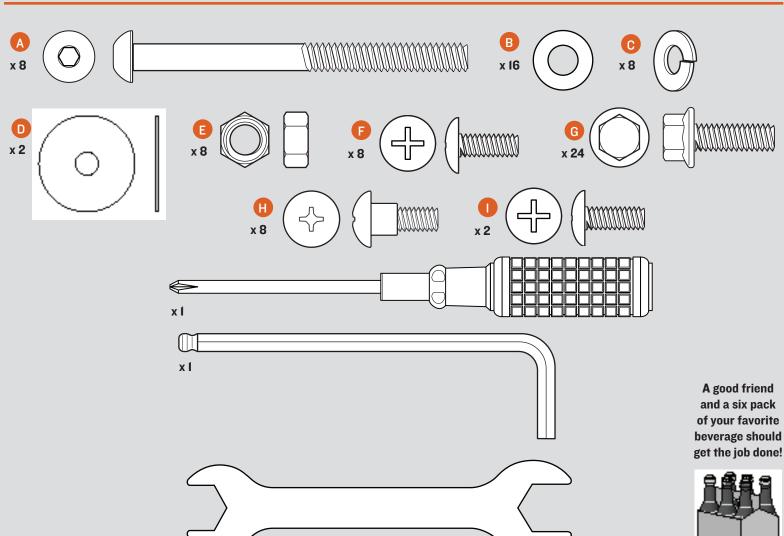



PLEASE READ THIS ASSEMBLY GUIDE AND YOUR OWNER'S MANUAL BEFORE INSTALLATION AND USE OF YOUR TRAEGER® FLATROCK. FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS ASSEMBLY GUIDE AND YOUR OWNER'S MANUAL COULD RESULT IN PROPERTY DAMAGE, BODILY INJURY, OR EVEN DEATH.










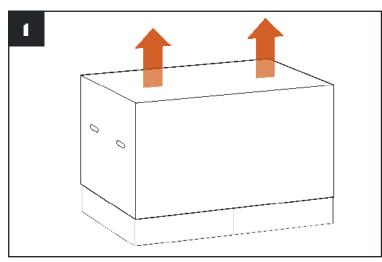


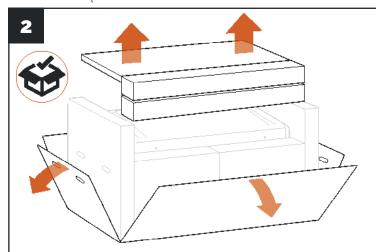

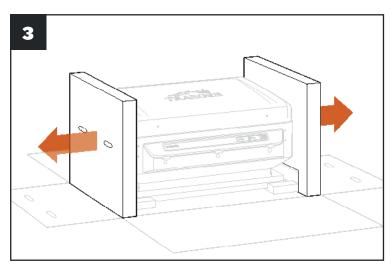

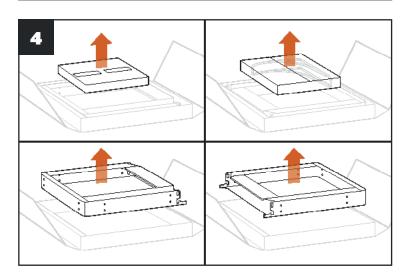

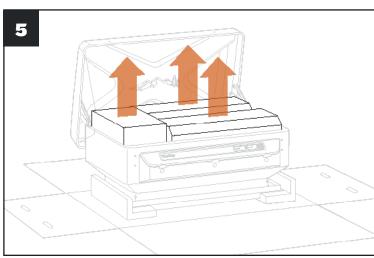


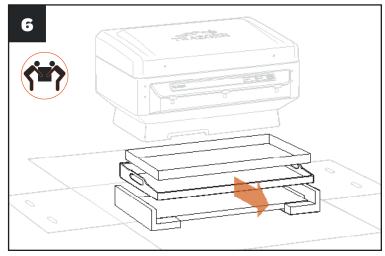











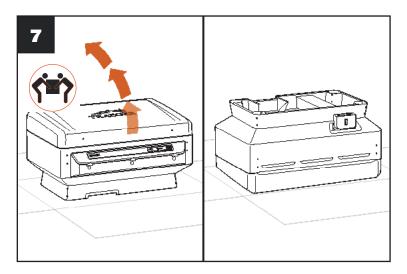


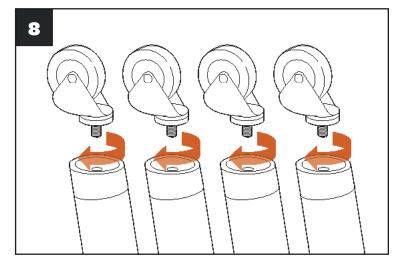

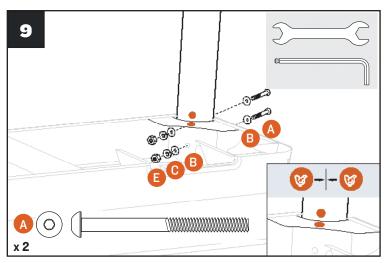

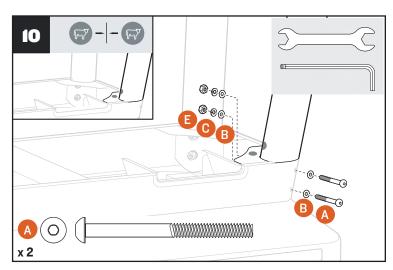

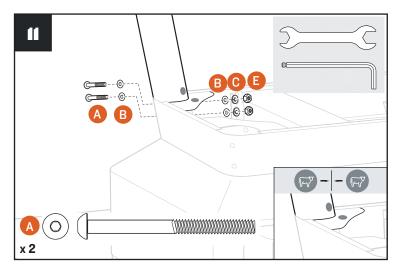


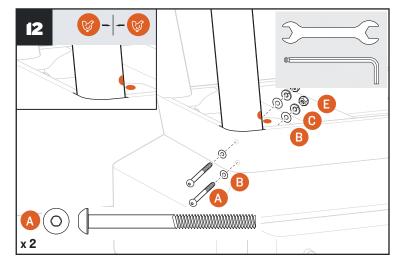











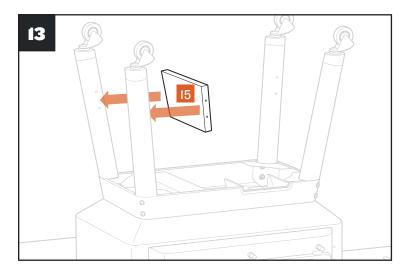


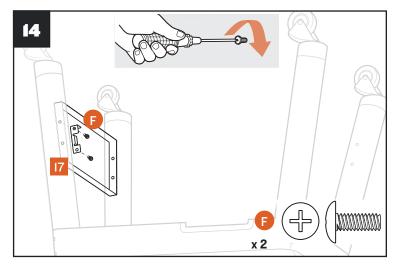

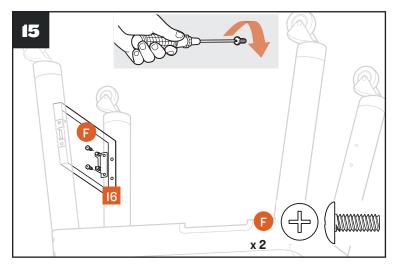

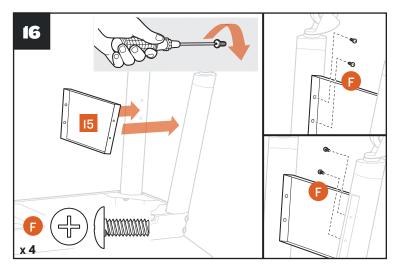

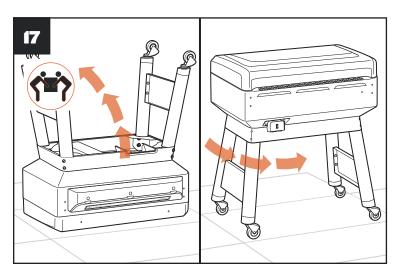


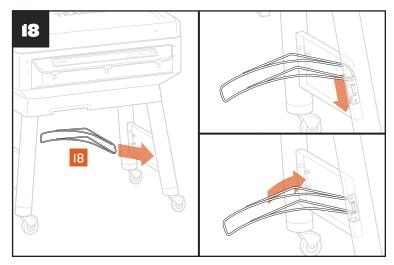











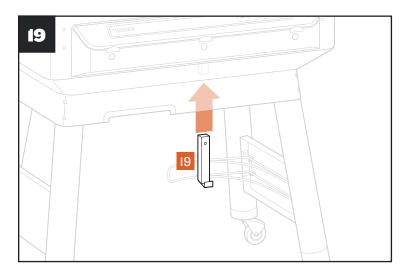


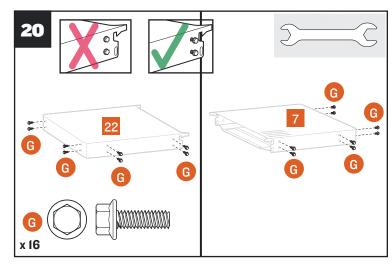

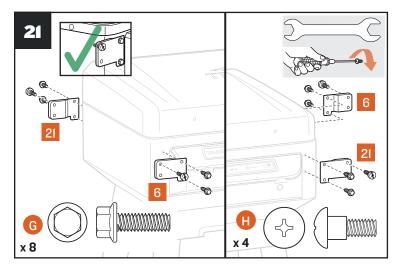

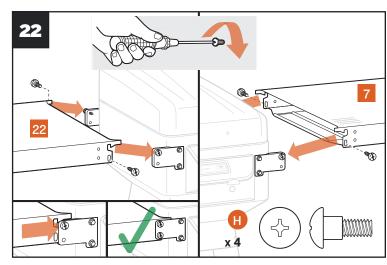

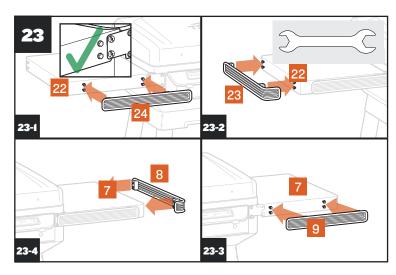


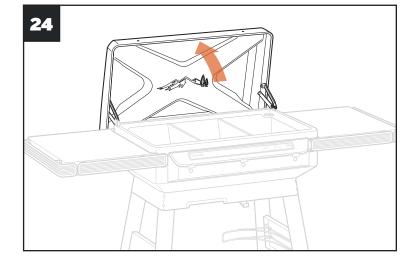











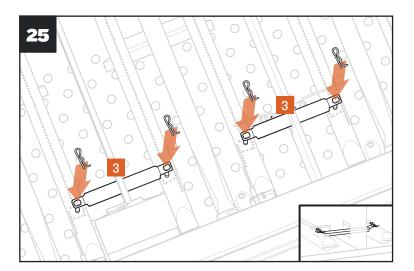


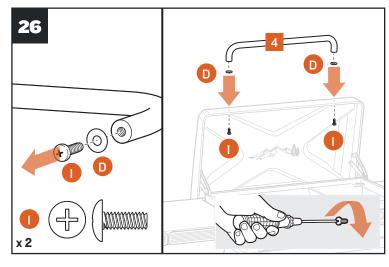

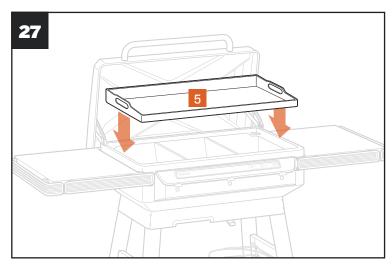

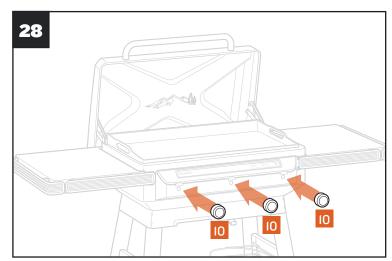

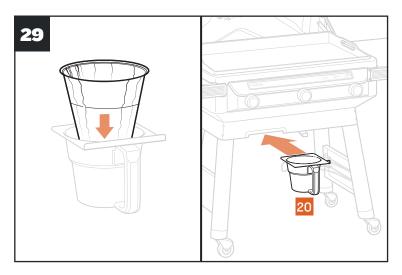


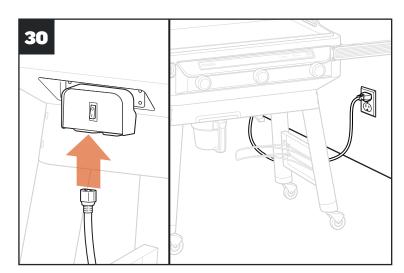








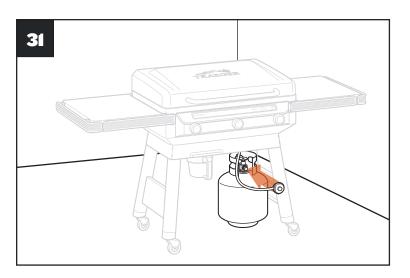

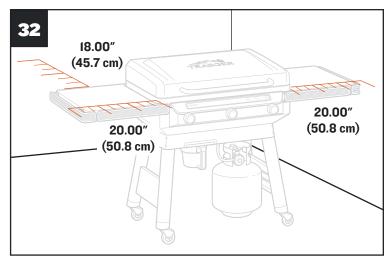

SEASONING YOUR FLAT TOP GRILL


ALSO REQUIRED PRIOR TO FIRST COOK.

In order to ensure the best flavor, optimal performance, and proper and safe operation of the Flat Top Grill, follow the instructions below to season your Flat Top Grill.

NOTE: This seasoning process is important to ensure proper Flat Top Grill performance. Seasoning the cooking surface makes it naturally nonstick and keeps out excess moisture, which can cause rust. Make sure that all internal components have been properly installed prior to the seasoning process and that there is no food on the Flat Top Grill during seasoning.


TOOLS NEEDED

- Traeger® Flat Top Grill Seasoning & Cast Iron Conditioner or canola oil
- Clean cotton cloth
- Metal tongs
- Watch or timer

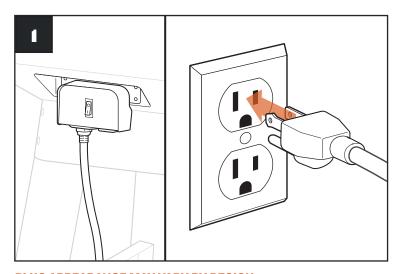


PLUG APPEARANCE MAY VARY BY REGION.

With the main power switch on the back of the Flat Top Grill set to OFF (O), plug the power cord into an appropriate grounded electrical outlet.

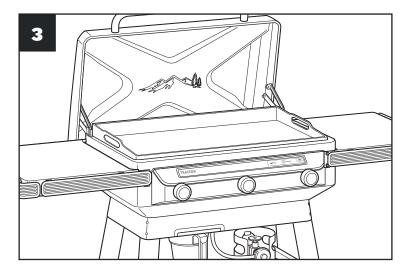


Preheat the Flat Top Grill on high for IO minutes.

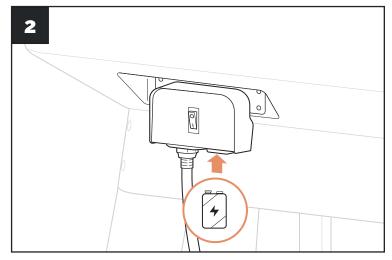


Turn the main power switch on the back of the Flat Top Grill to ON (I). The power switch will illuminate when turned on.

PRO TIP: Add an optional 9v battery to ignite your flat top when it's not plugged in (9v battery sold separately)..

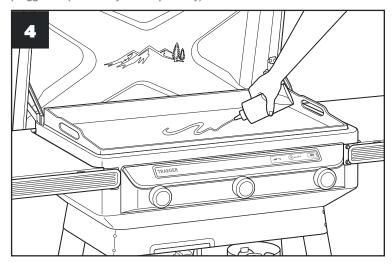


Once the Flat Top Grill is hot, squeeze about 2-3 Tbsp of the conditioner or your oil over the cooktop in a zigzag pattern, covering the entire cooktop.


SEASONING YOUR FLAT TOP GRILL CONTINUED

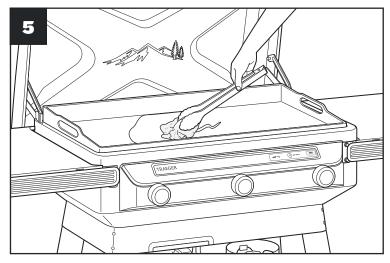

Using tongs clasping a clean towel or paper towel, spread the conditioner evenly over the surface and up the sides. It will immediately begin to smoke. Using a clean side of the towel, wipe off any excess conditioner or oil to create a very thin layer.

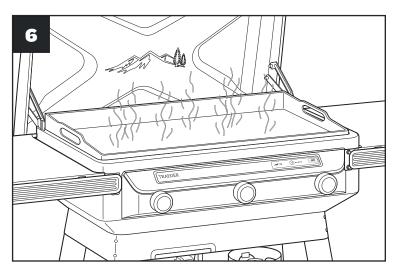

Continue heating until the smoking ends—about 10 minutes.

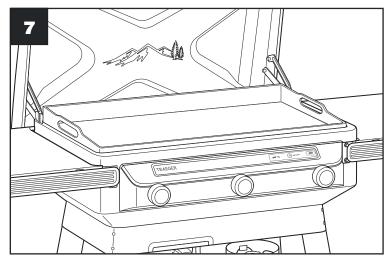

Leaving the heat on high, repeat the oiling and smoking for a total of four times. The surface will become darker and smoother.

PRO TIP: Let the cooktop cool for at least 30 minutes before cooking on it.

TO LEARN MORE ABOUT HOW TO USE YOUR FLAT TOP GRILL AND TO REGISTER THE PRODUCT, REFER TO YOUR OWNER'S MANUAL.