


ASSEMBLY GUIDE

FLATROCK® FLAT TOP GRILL

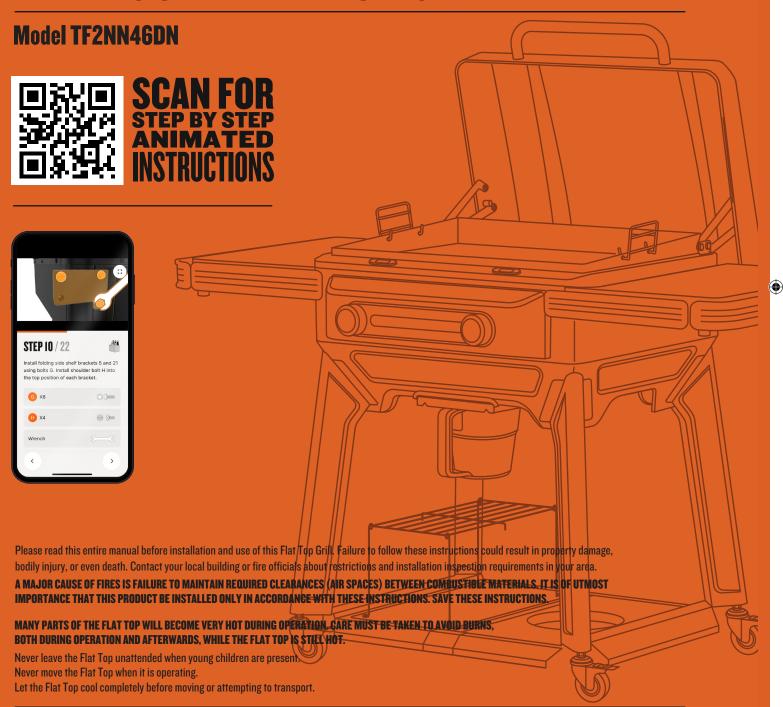


IMPORTANT: RETAIN FOR FUTURE REFERENCE. READ CAREFULLY.

T17964


© 2025 Traeger Pellet Grills LLC. All rights reserved.

TRAEGER PELLET GRILLS LLC 533 SOUTH 400 WEST SALT LAKE CITY, UT 84101


TRAEGER.COM

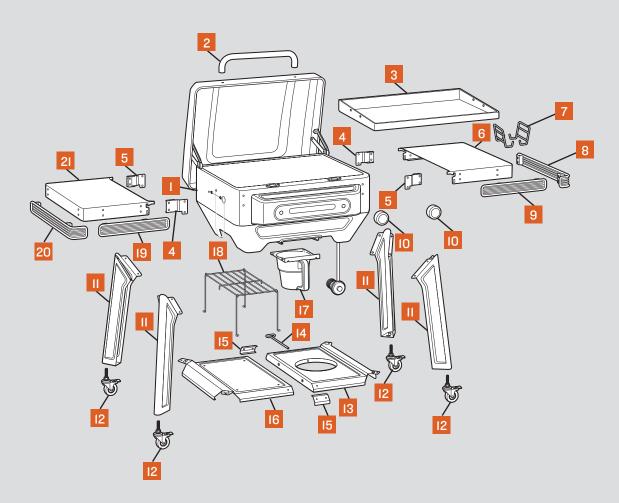

•

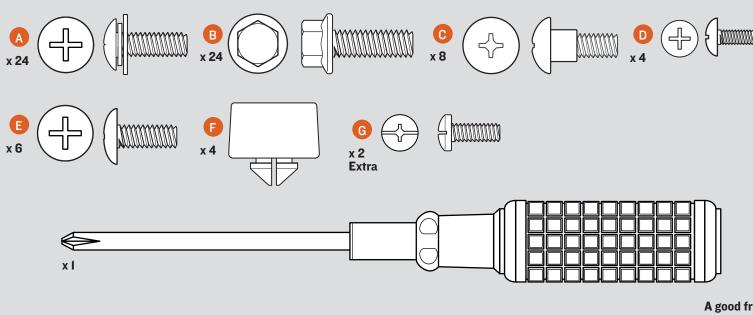

(

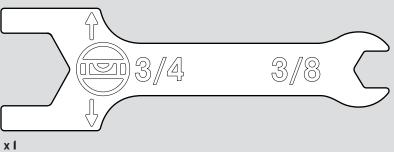

A good friend and a six pack of your favorite beverage should get the job done!





PLEASE READ THIS ASSEMBLY GUIDE AND YOUR OWNER'S MANUAL BEFORE INSTALLATION AND USE OF YOUR TRAEGER® FLATROCK®. FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS ASSEMBLY GUIDE AND YOUR OWNER'S MANUAL COULD RESULT IN PROPERTY DAMAGE, BODILY INJURY, OR EVEN DEATH.





(


Scan this code for digital/video instructions.







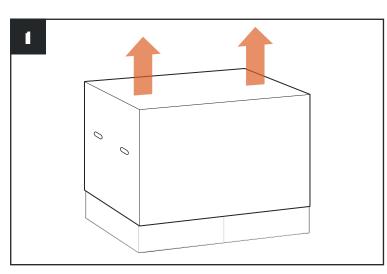


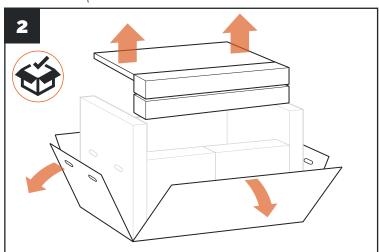

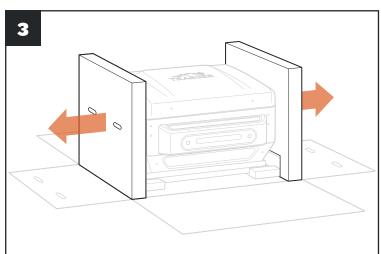

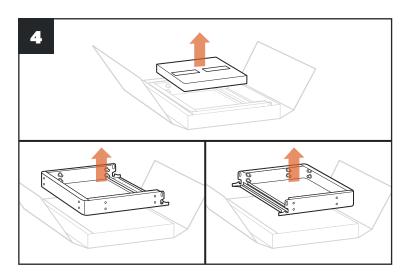

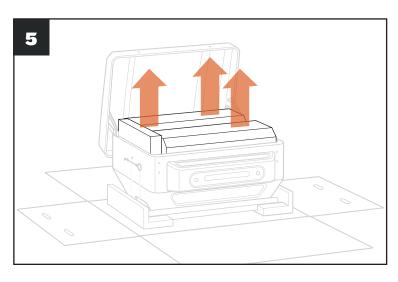

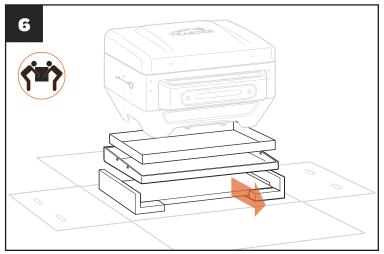

3








Scan this code for digital/video instructions.







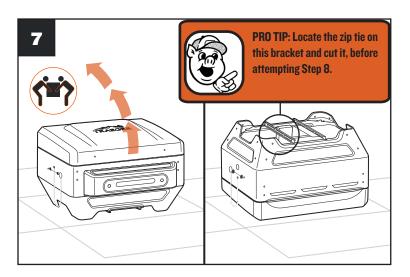


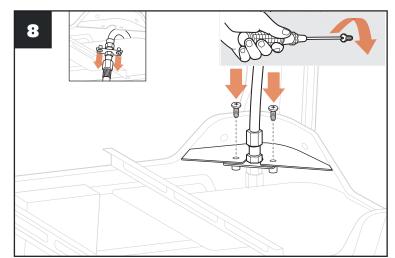

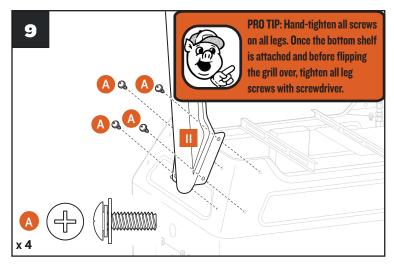

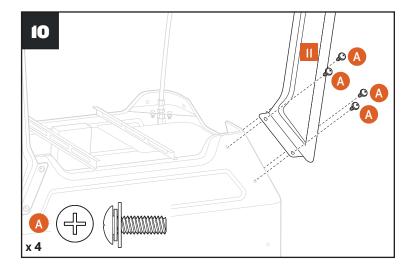

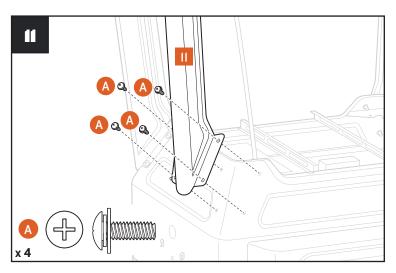

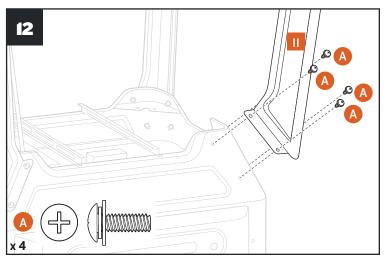

4








Scan this code for digital/video instructions.







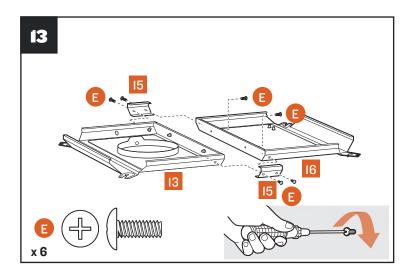


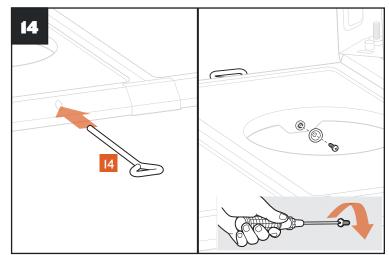

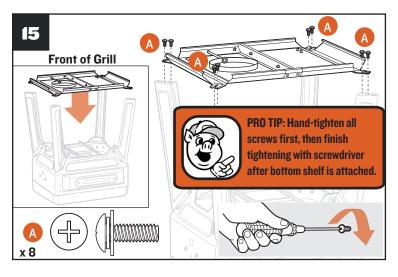

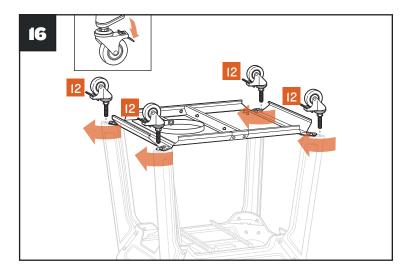

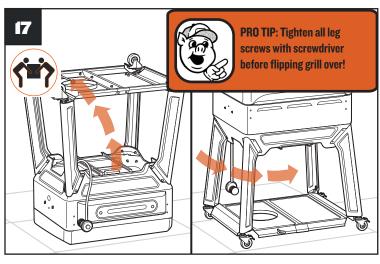

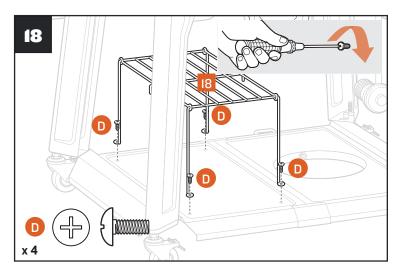







Scan this code for digital/video instructions.








(

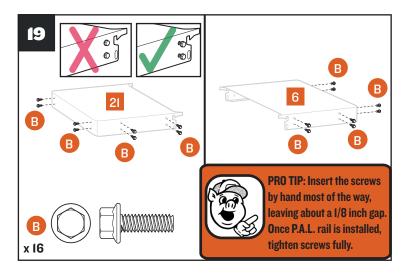


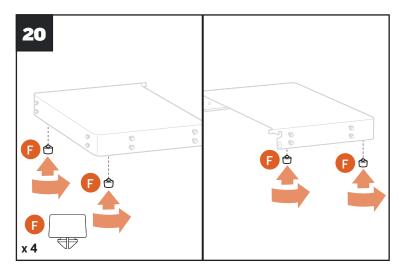

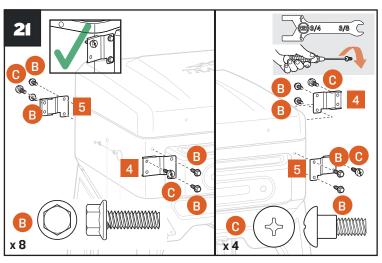

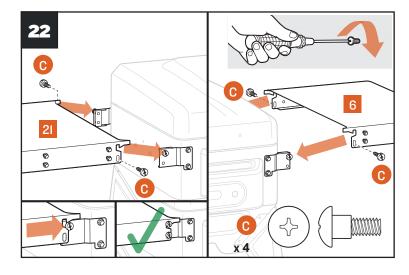

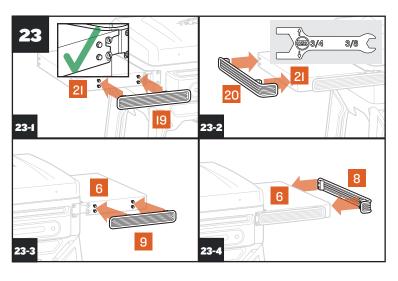

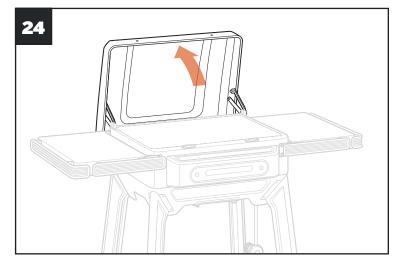

6








Scan this code for digital/video instructions.







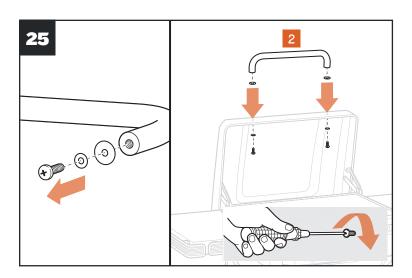


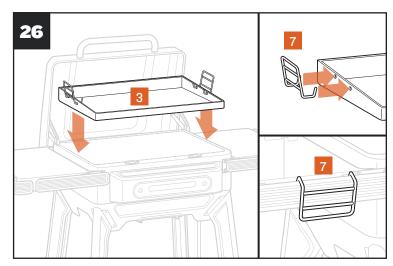

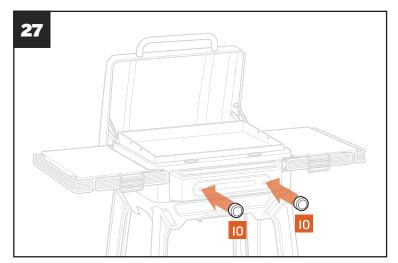

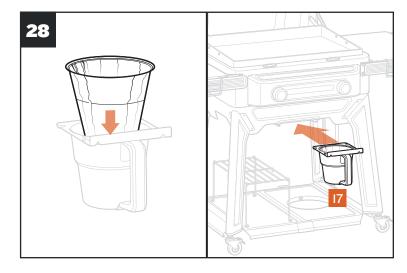

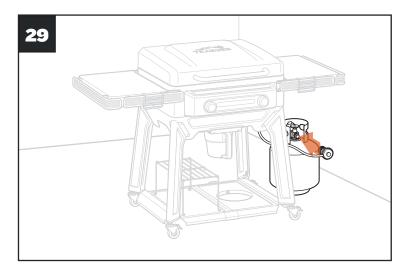

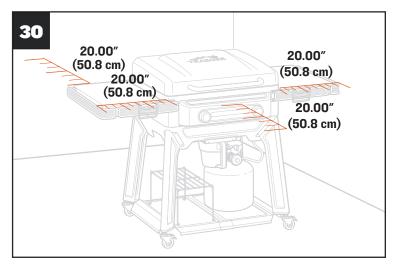



SEASONING YOUR FLAT TOP GRILL

ALSO REQUIRED PRIOR TO FIRST COOK.

In order to ensure the best flavor, optimal performance, and proper and safe operation of the Flat Top Grill, follow the instructions below to season your Flat Top Grill.

NOTE: This seasoning process is important to ensure proper Flat Top Grill performance. Seasoning the cooking surface makes it naturally nonstick and keeps out excess moisture, which can cause rust. Make sure that all internal components have been properly installed prior to the seasoning process and that there is no food on the Flat Top Grill during seasoning.


TOOLS NEEDED

- Traeger® Flat Top Grill Seasoning & Cast Iron Conditioner or canola oil
- Clean cotton cloth


- Metal tongs
- Watch or timer

LEVEL GRILL

NOTE: Ensure your grill is in the location where you'd like to cook before leveling.

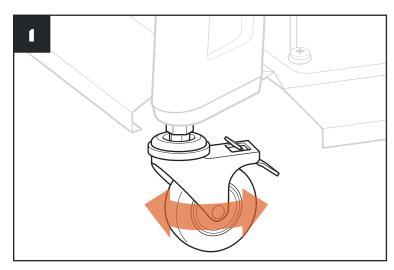

Level grill by adjusting the position of each caster individually. To adjust caster position, set the caster lock and rotate the caster by hand. Adjusting to the right will shorten the position, and to the left will extend it. Once you've got your desired level, proceed to step 2.

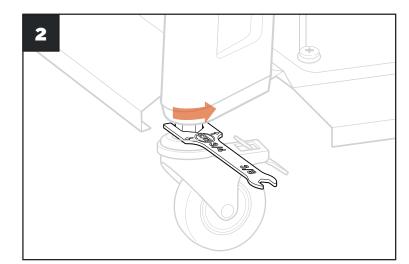

Tighten jam nut all the way with included wrench to lock leveling. The jam nut is underneath the leg but above the caster.

▲ WARNING Personal Injury Hazard


Do not exceed 1.25" of leveling, or the caster will fall out of the leg, possibly damaging the product or injuring you. The maximum extension should be less than the width of the large side of the assembly wrench.





4

START SEASONING:

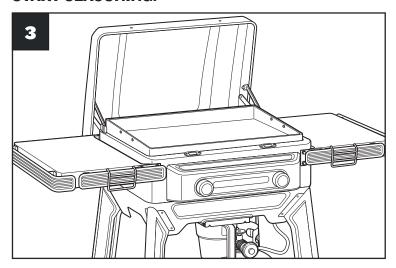


Preheat the Flat Top Grill on high for IO minutes. Make sure the propane tank valve has been turned to the fully open position. Press the control knob and rotate to the ignite position ($\stackrel{\star}{\wedge}$). Turning the knob opens the control valve and activates the igniter. Look at the burner through the flame window to confirm that the burner has successfully lit. If the burner did not light, turn the control knob back to the OFF (O) position and repeat until burner ignition is confirmed.

PRO TIP: In cold weather the flame window may fog when the burner is initially lit. If fogging occurs, this means the flame is lit and fog should dissipate within 20 seconds. If flame window is fogged up, always confirm that the burner has successfully lit by looking between the gap under or on the side of the cook surface until you see the flame.

A WARNING Fire Hazard

 If the Flat Top Grill does not ignite within 5 seconds, turn burner controls OFF (O), wait 5 minutes to allow gas to dissipate, and repeat ignition procedure. If Flat Top Grill does not ignite, gas will continue to flow out of burner and could accidentally ignite.

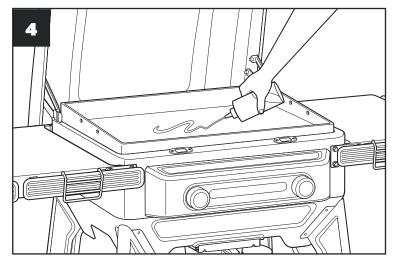


Once the Flat Top Grill is hot, squeeze about 2-3 Tbsp of the conditioner or your oil over the cooktop in a zigzag pattern, covering the entire cooktop.







SEASONING YOUR FLAT TOP GRILL (CONT.)

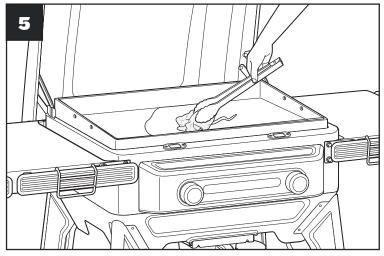

Using tongs clasping a clean towel or paper towel, spread the conditioner evenly over the surface and up the sides. It will immediately begin to smoke. Using a clean side of the towel, wipe off any excess conditioner or oil to create a very thin layer.

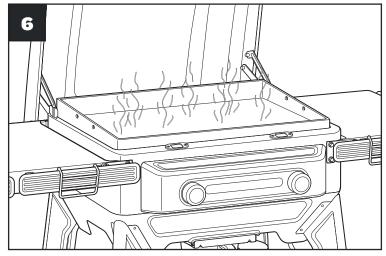

Continue heating until the smoking ends—about 10-15 minutes.

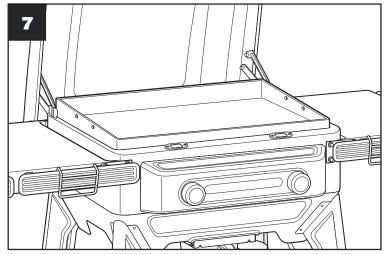

Leaving the heat on high, repeat the oiling and smoking for a total of four times. The surface will become darker and smoother.

PRO TIP: Let the cooktop cool for at least 30 minutes before cooking on it.



TO LEARN MORE ABOUT HOW TO USE YOUR FLAT TOP GRILL AND TO REGISTER THE PRODUCT, REFER TO YOUR OWNER'S MANUAL.











